# Servicekarte / Service card

| Modelname / Model name: Bett/Bed BE-0520 | **Ausführung / Version: Wildeiche / Wild oak** |
|---|---|
| 140x200<br>Model-Nr. / Model No.:<br>1012002 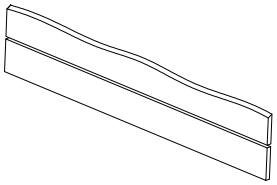 | 140x200<br>Model-Nr. / Model No.:<br>1012006 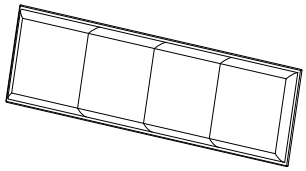 |
| 160x200<br>Model-Nr. / Model No.:<br>1012003 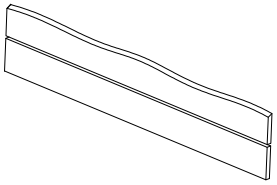 | 160x200<br>Model-Nr. / Model No.:<br>1012007 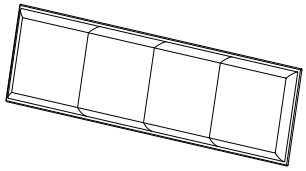 |
| 180x200<br>Model-Nr. / Model No.:<br>1012004 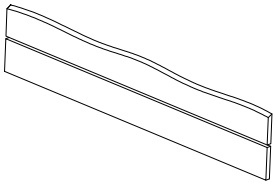 | 180x200<br>Model-Nr. / Model No.:<br>1012008 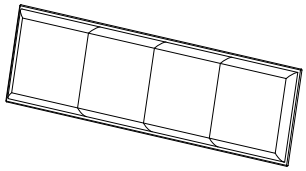 |
| 200x200<br>Model-Nr. / Model No.:<br>1012005 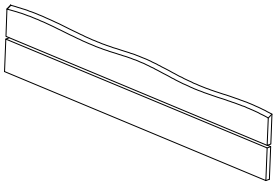 | 200x200<br>Model-Nr. / Model No.:<br>1012009 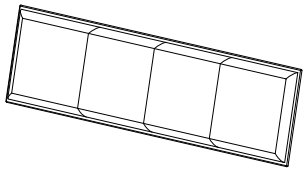 |

70104

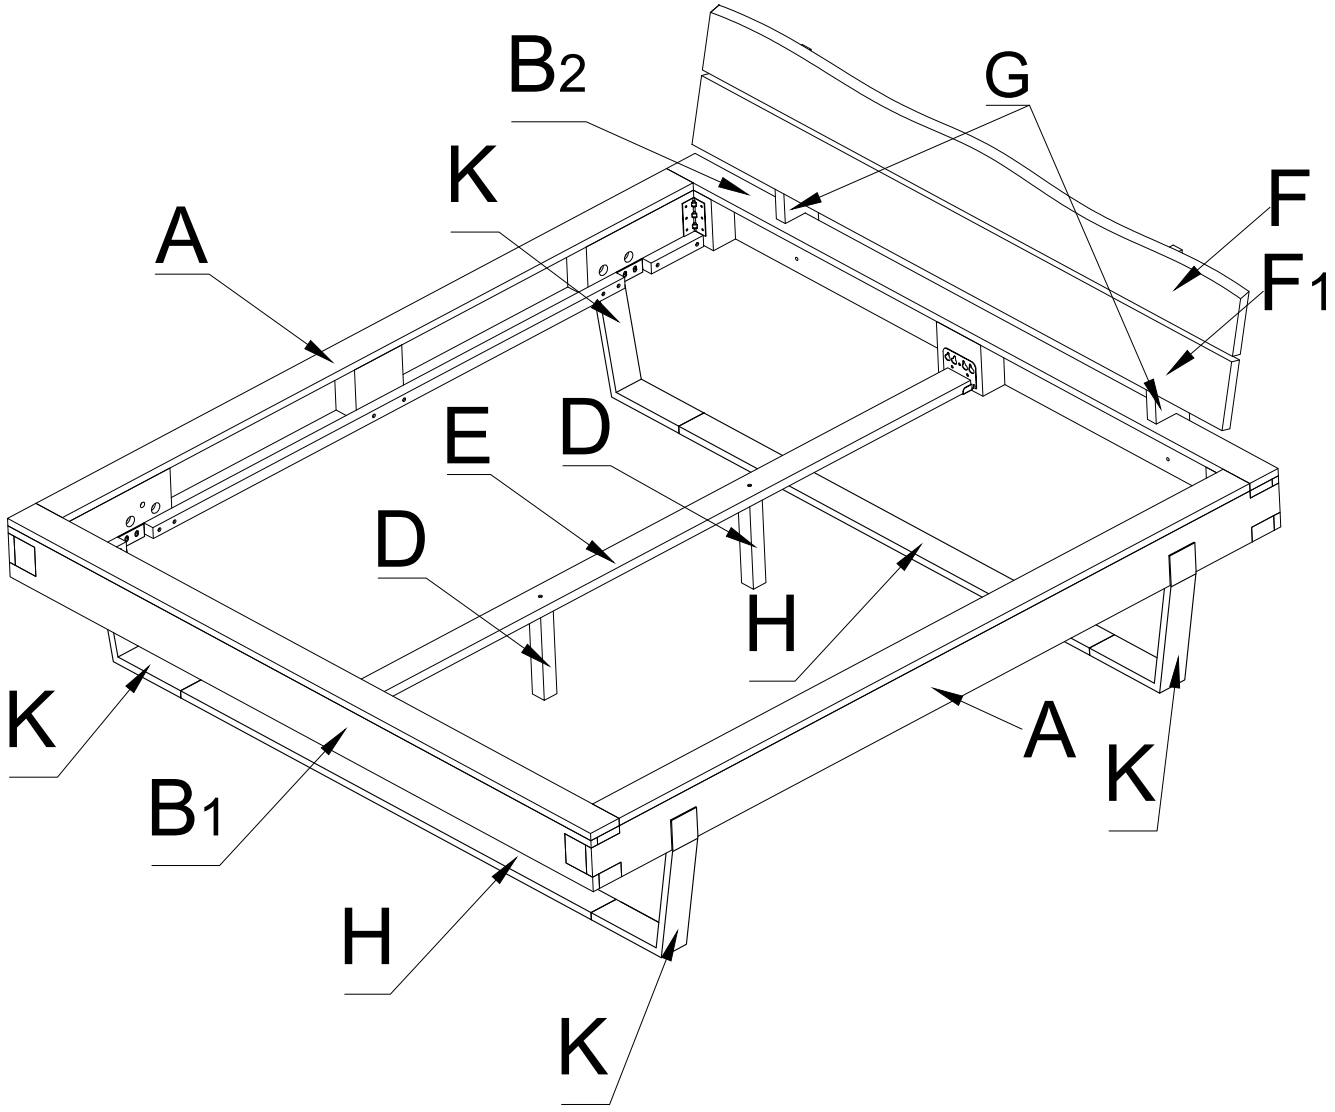

**DE**: Sehr geehrter Kunde, Sehr geehrte Kundin!
Fehlt Ihnen ein Beschlagteil oder ist es Defekt? Kein Problem! Nutzen Sie unsere Servicekarte!
Unser Direkt-Bestellservice für fehlende/defekte Beschlagteile:
Kontaktieren Sie uns telefonisch unter Tel. +499503/5033-114 oder senden Sie uns eine E-Mail an kundendienst@3s-frankenmoebel.de. Bitte geben Sie dabei folgende Pflicht-Informationen an: -> Auftragsnummer, Artikelnummer, Nummer des Beschlagteils, fehlende/defekte Menge, und den Grund der Beanstandung, ob es sich um ein defektes oder fehlendes Beschlagteil handelt. Tragen Sie die benötigte Menge ein. Mailen Sie uns die vollständig ausgefüllte Servicekarte zu, um die Bearbeitung zu ermöglichen. Für andere Beanstandungen / Beschädigungen an Ihrem Möbelstück wenden Sie sich bitte direkt an Ihr Möbelhaus.

**EN**: Dear customer!
Are you missing a fitting part or is it defective? No problem! Use our service card!
Our direct ordering service for missing/defective fitting parts:
Contact us by telephone on +499503/5033-114 or send us an e-mail to kundendienst@3s-frankenmoebel.de.
Please include the following mandatory information: -> Order number, article number, number of the fitting part, missing/defective quantity, and the reason for the complaint, whether it is a defective or missing fitting part. Enter the required quantity.
Mail us the completed service card to enable processing.
For other complaints/damage to your furniture, please contact your furniture store directly.

| | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | | | | 17. M6x45 x8 | 16. M6x55 x8 | 15. 5x50 x8 | 14. 4x16 x8 | 13. Ø8,2 x8 | 12. M8x30 x8 | | |
| 1. SW 4 SW 6 x3 | 2. OK13 x1 | 3. x4 | 4. x2 | 5. 4,2x19 x24 | 6. M6x15 x4 | 7. 4x20 x4 | 8. M6x13 x16 | 9. x8 | 10. M8x30 x2 | 11. 4x50 x2 | | |

**Grund der Beanstandung:**
reason for complaint: _____

**Name:**
name: _____

**Strasse:**
street: _____ **Haus Nr.:** house number: _____

**Postleitzahl:**
postal code: _____ **Ort:** place: _____

**Telefonnummer:**
telephone number: _____

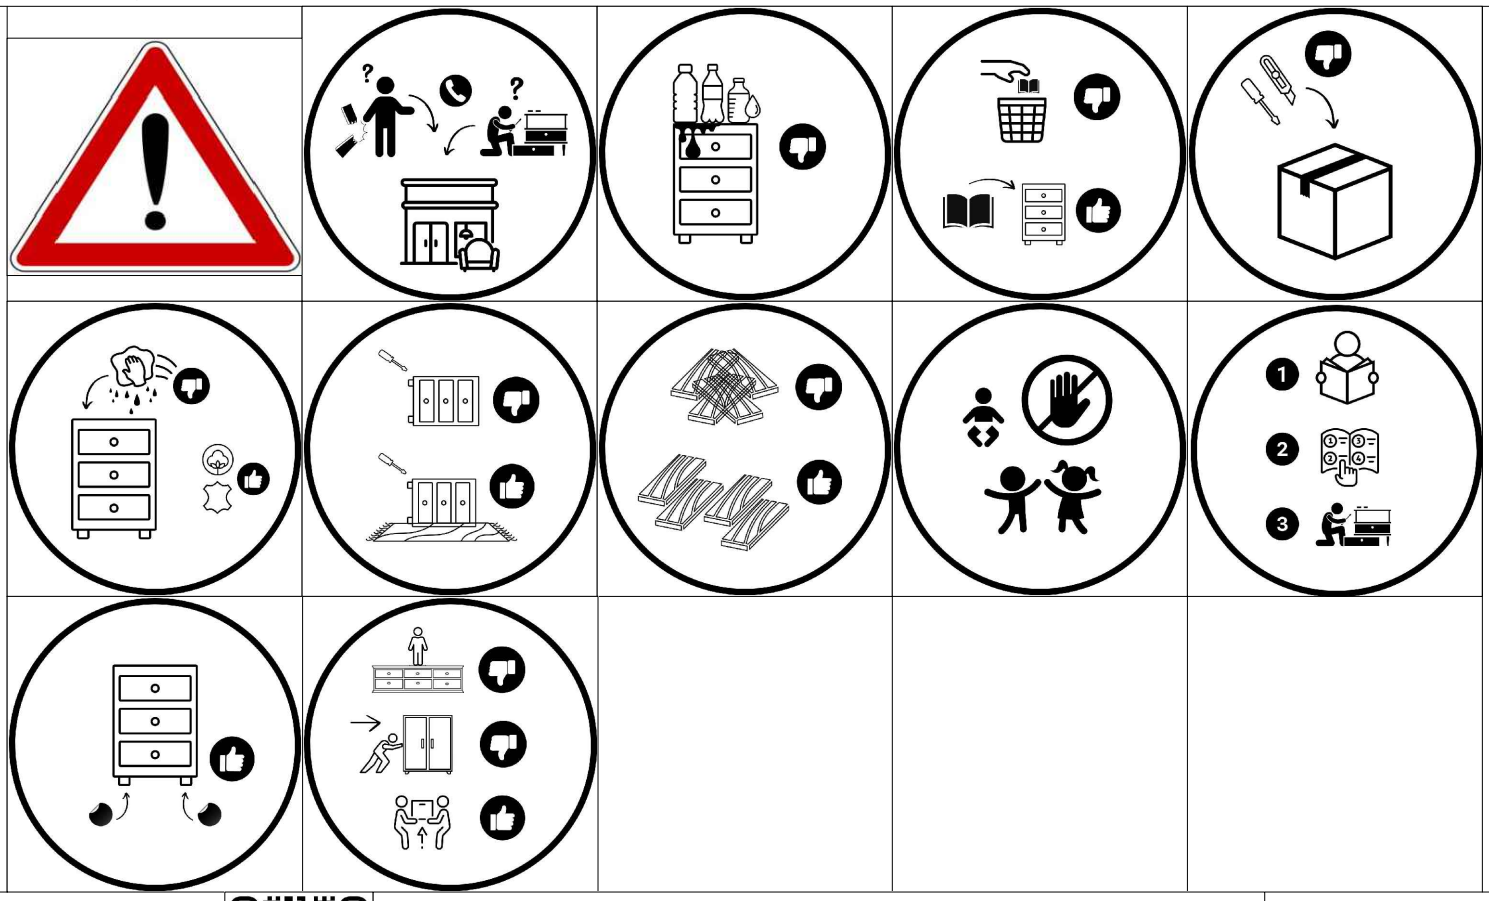

NL PL CZ FR SI SK HU

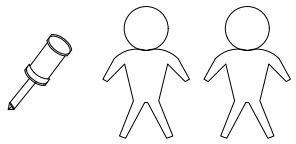

90 Minuten

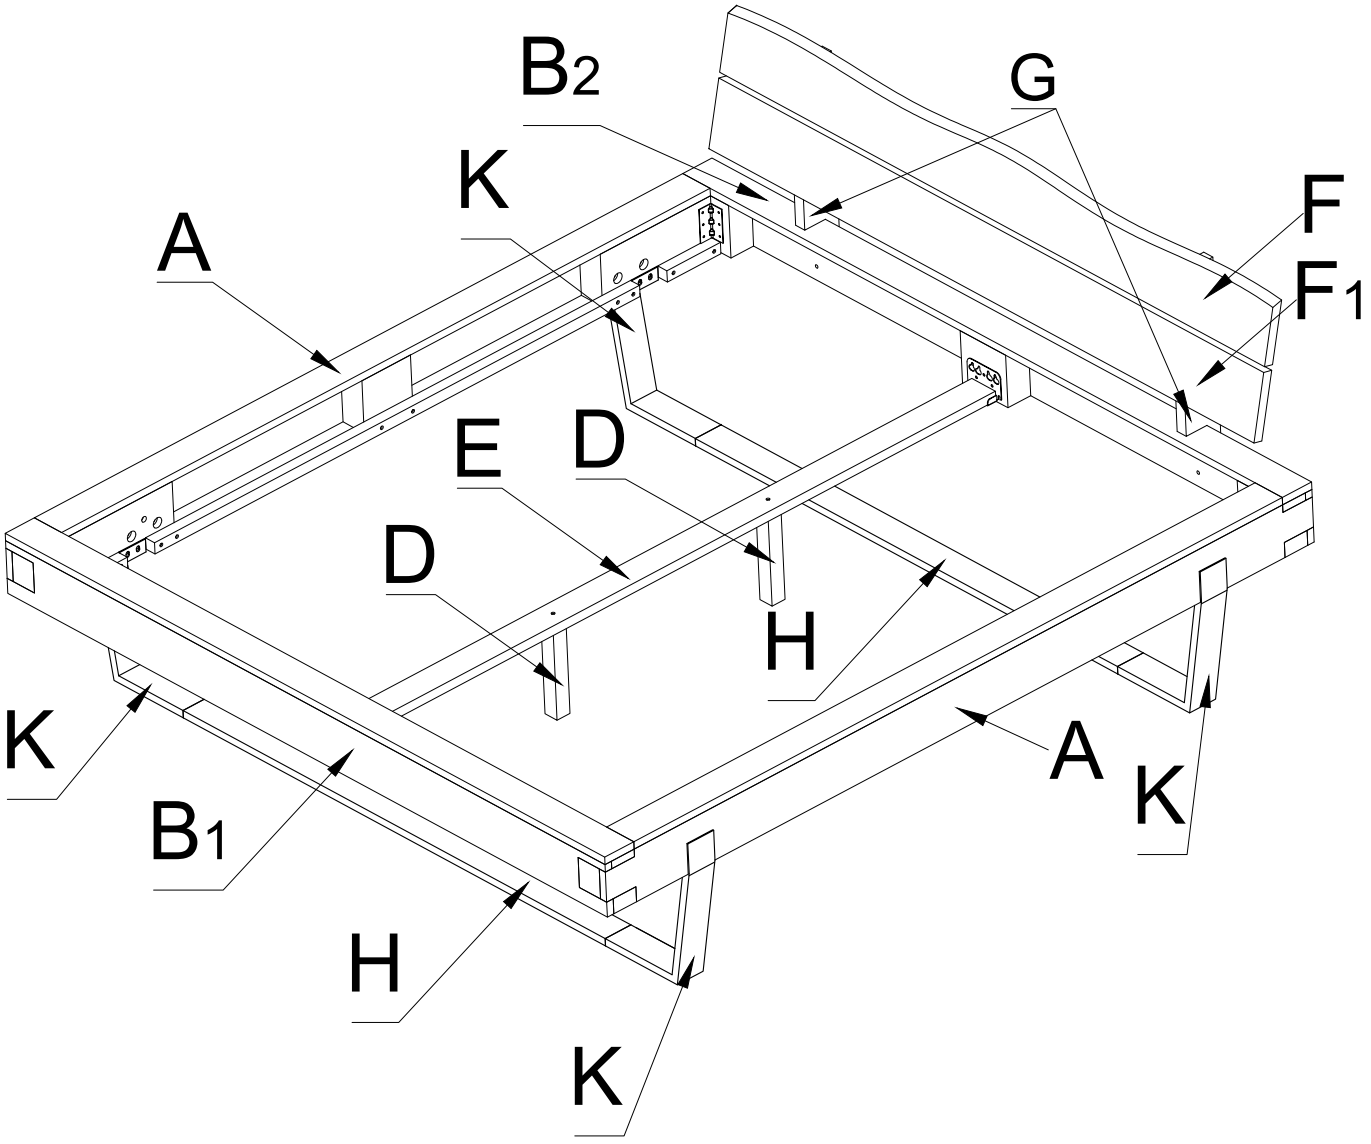


| | | | | | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | | | | | | | | | | | | 17. M6x45 x8 | 16. M6x55 x8 | 15. 5x50 x8 | 14. 4x16 x8 | 13. Ø8,2 x8 | 12. M8x30 x8 | | |
| 1. SW 4 SW 6 x3 | | 2. OK13 x1 | | 3. x4 | | 4. x2 | | 5. 4,2x19 x24 | | 6. M6x15 x4 | | 7. 4x20 x4 | | 8. M6x13 x16 | | 9. x8 | | 10. M8x30 x2 | | 11. 4x50 x2 | |

2

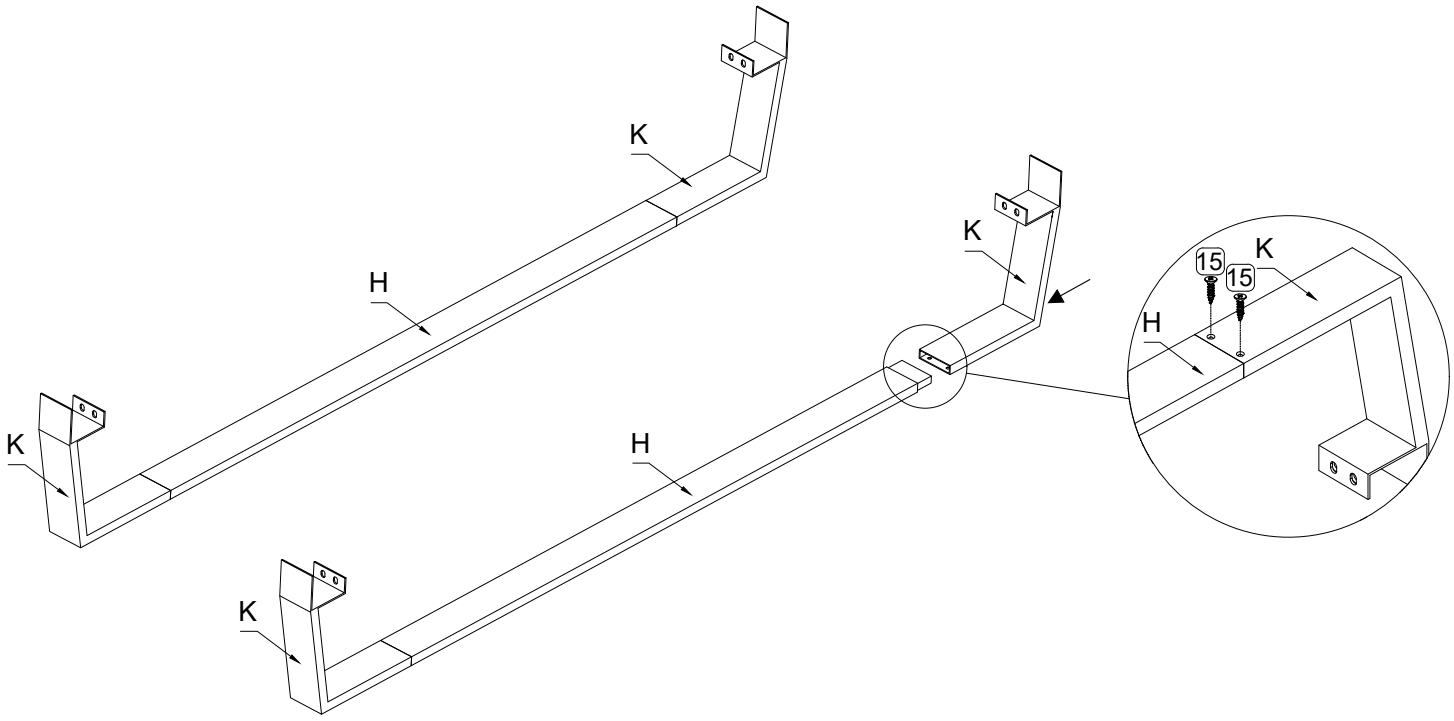


15. 4x16



x8

3

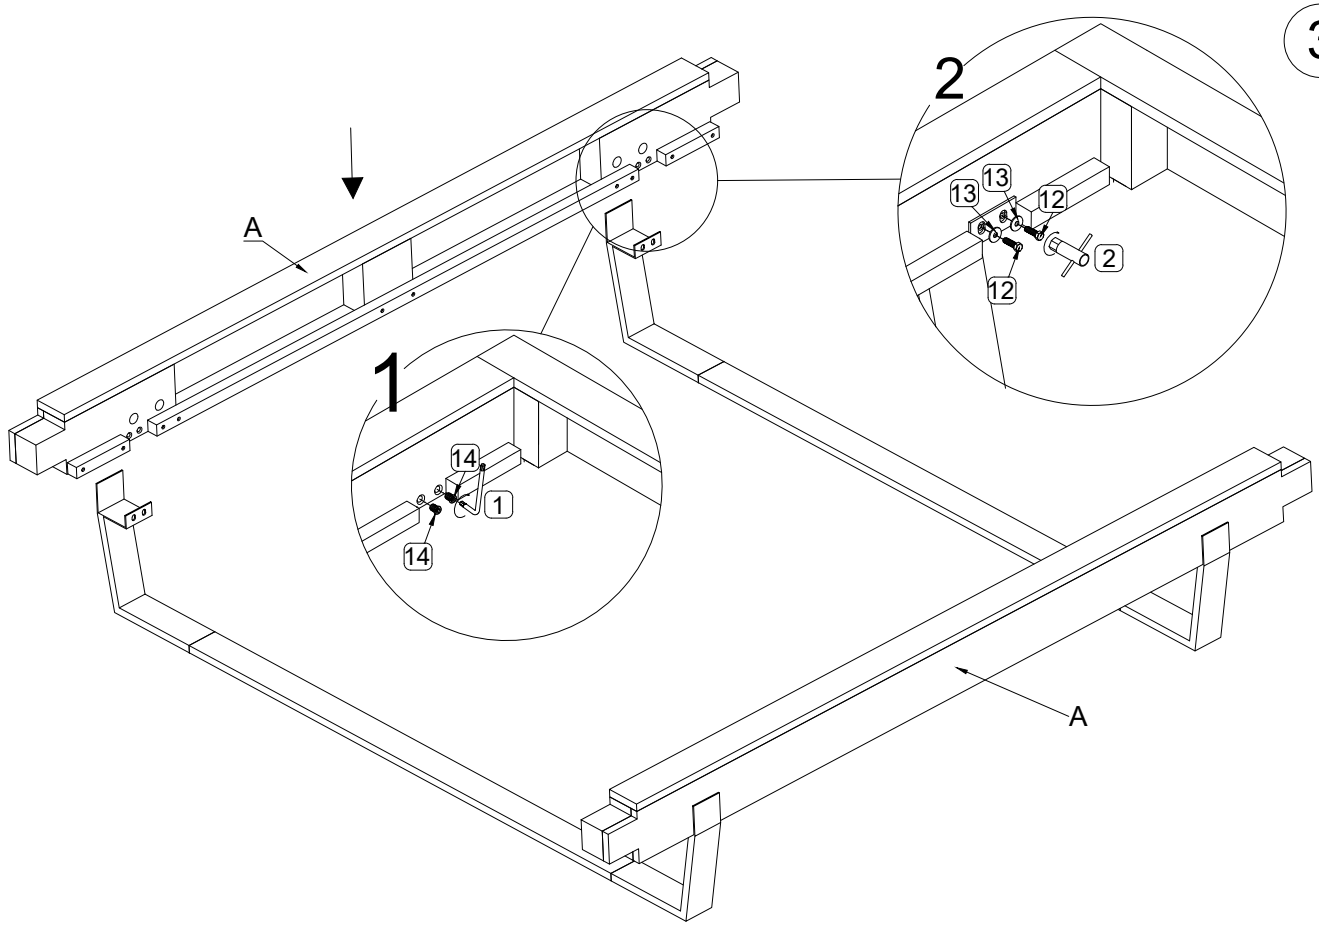


1. S=6mm

x1

2. OK13

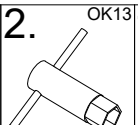

x1

12. M8x30

x8

13. Ø8,2

x8

14. M8x20



x8

MONTAGEANLEITUNG / ASSEMBLY INSTRUKTION BETT / BED - 0520

4

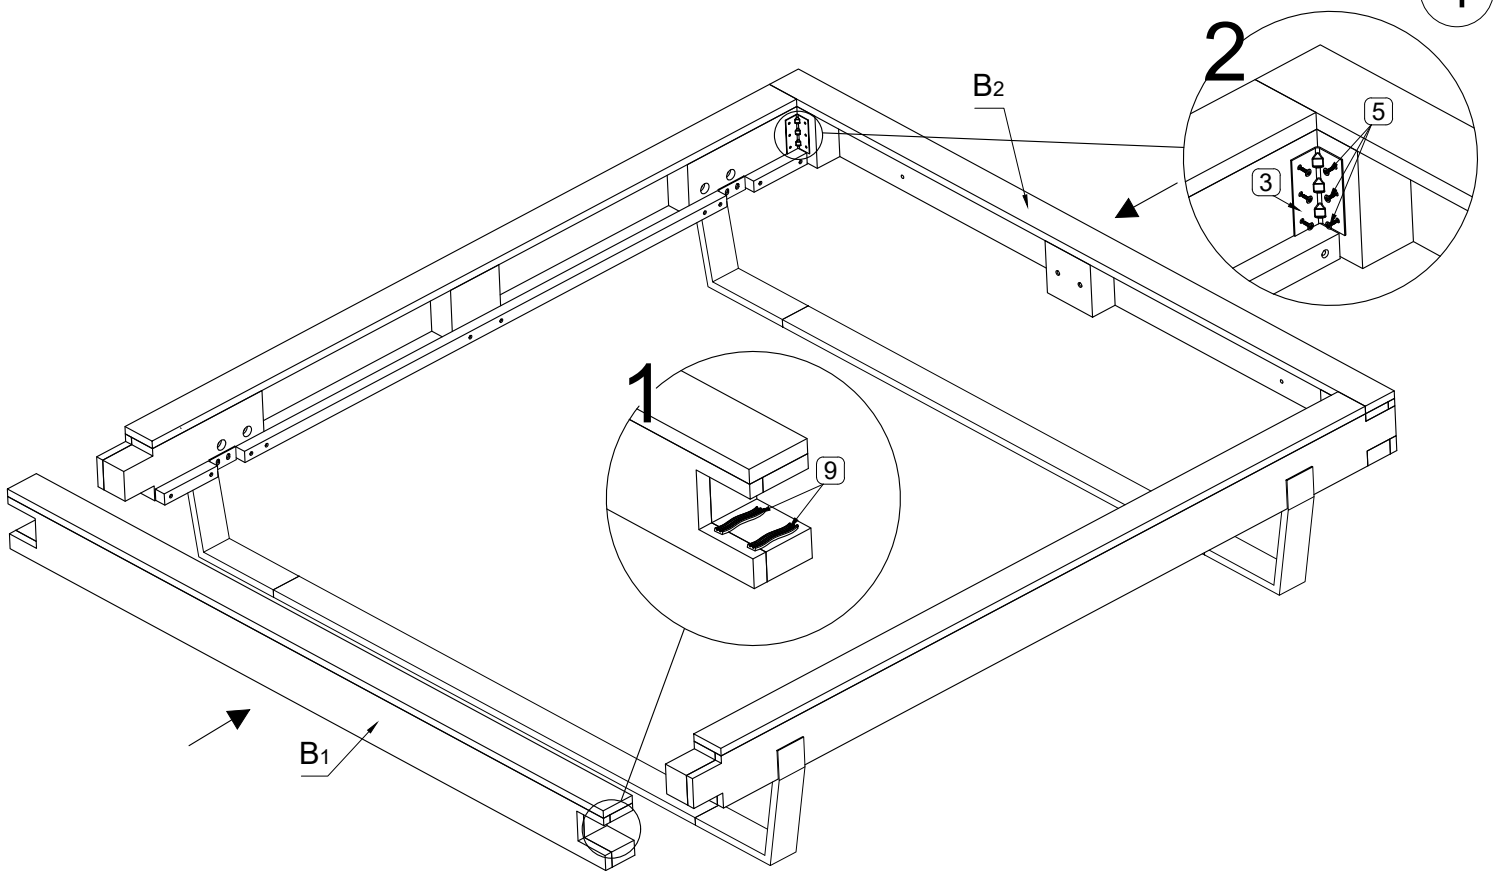


| 3. | 5. 4,2x19 | 9. |
|---|---|---|
| x4 | x24 | x8 |

5

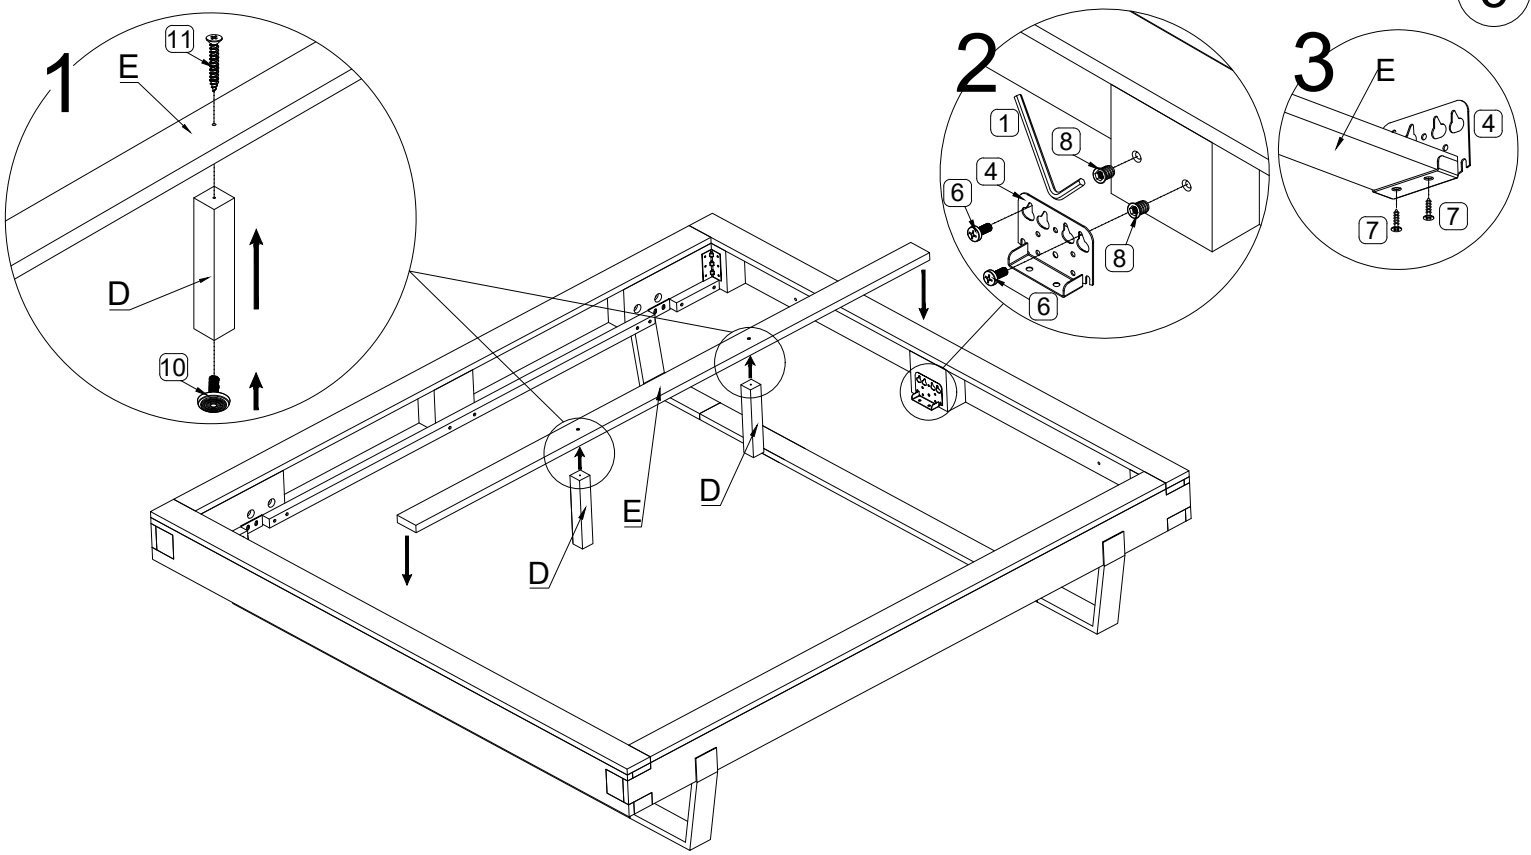


| 1. S=6mm | 4. | 6. M6x15 | 7. 4x20 | 8. M6x13 | 10. M8x30 | 11. 4x50 |
|---|---|---|---|---|---|---|
| x1 | x2 | x4 | x4 | x4 | x2 | x2 |

6

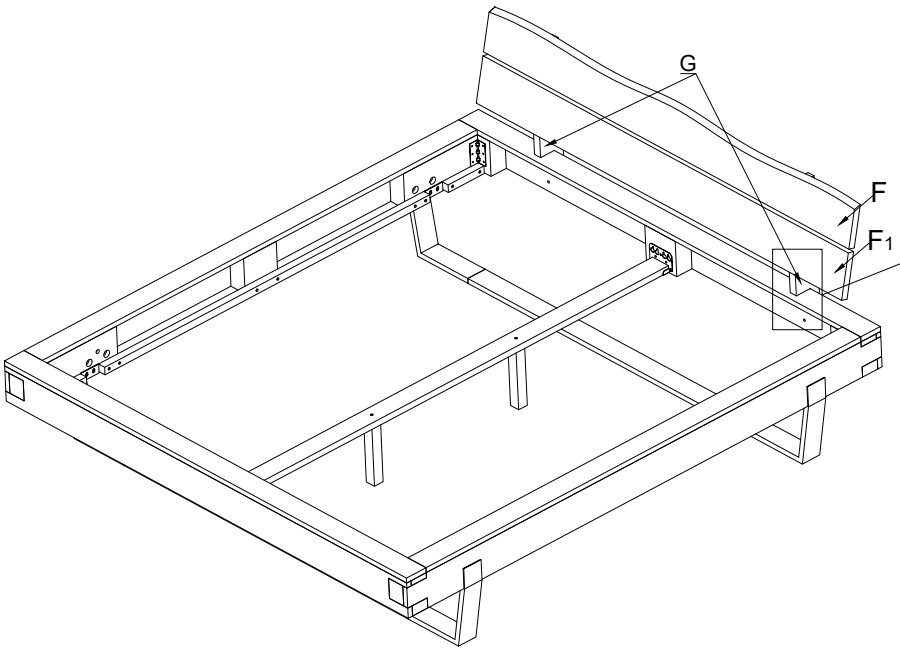


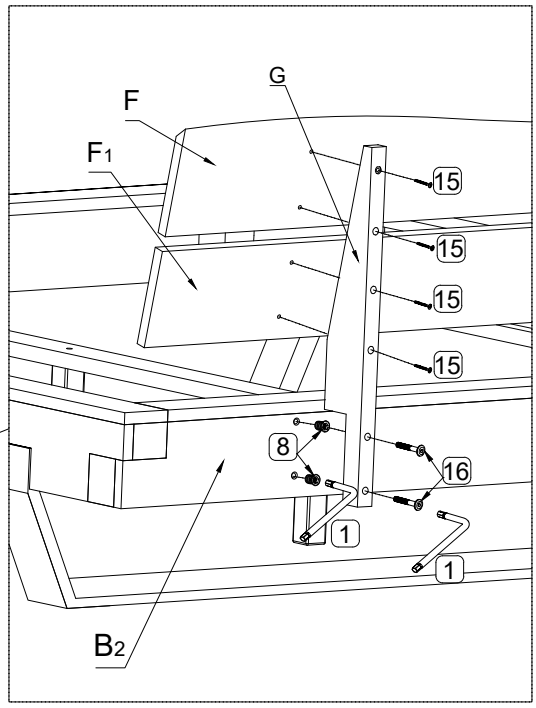


| 1. S=4mm S=6mm | 8. M6x13 | 15. 5x50 | 16. M6x55 |
|---|---|---|---|
| x2 | x4 | x8 | x4 |

7

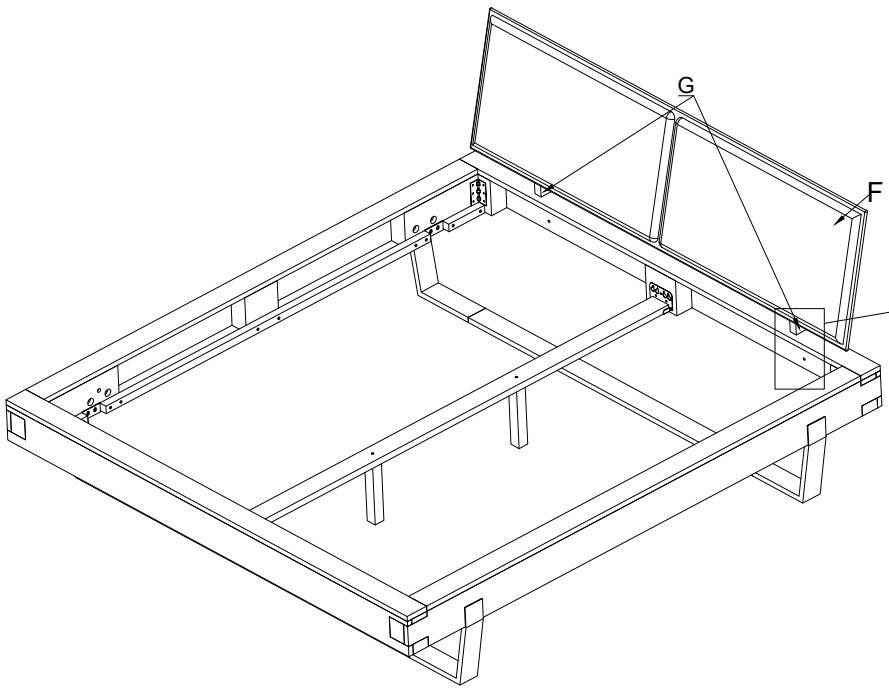


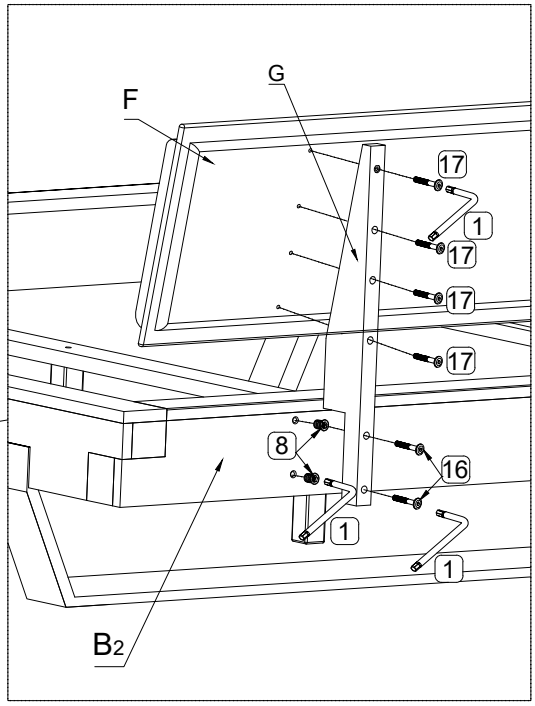


| 1. S=4mm S=6mm | 8. M6x13 | 16. M6x55 | 17. M6x45 |
|---|---|---|---|
| x2 | x4 | x4 | x8 |